

Eagle Quick Start Guide

1) FILL RESERVOIR TANK WITH WATER

- Remove the Tank Cap and fill the reservoir tank with tap water.
- **Do NOT put cleaning fluids in the steamer - THIS WILL VOID THE WARRANTY**

Tank Cap

2) CONNECT HOSE

- Lift the socket cover on the front.
- Insert the hose into the socket until you hear a “click”.



3) PLUG INTO ELECTRICAL OUTLET

- Plug the power cord into an outlet.
- The steam cleaner should be the only appliance plugged into the outlet.
- **Use only a 12 gauge / 15AMP rated or higher extension cord.**


4) POWER ON THE STEAM CLEANER


- Press the **POWER** button




ON/OFF

It will take **10 minutes before your steamer is ready to use**

The  light will blink indicating the boiler is heating.

When the  stops blinking, the steamer is ready to use.

During use, the  will blink indicating the boiler is heating.



LOW WATER ALERT & REFILLING

During start-up or during use, the steamer may run low on water causing the **low water indicator** to blink and the alarm to sound.



The Eagle steamer has a separate fill tank so there is no cool down requirements.

- Remove tank cap, add water, and continue steaming.

5) BLEED THE HOSE BEFORE USING

- Squeeze the **gray** trigger on the hose handle to purge water from the hose for about 10 seconds



6) STEAM CONTROL DIAL

- The Steam Control Dial is located on top of the steamer.
- **INCREASE** steam pressure by turning the dial to the **LEFT**.
- **DECREASE** steam pressure by turning to the **RIGHT**.
- Do NOT turn the dial all the way to the **RIGHT**. This is the lowest possible setting and no steam will release when pulling the trigger.



7) SHUT DOWN PROCEDURE

- Push the **Power** button to turn off the Eagle.
- For storage, we recommend draining the water from the boiler.
- Make sure steamer has cooled before draining water from the boiler.

