

Components



ON / OFF

Vacuum Button

➤ Push to Turn ON

Steam Button

➤ Push to start making steam

Steam Pressure Control



Water Fill Tank



Lid Clamps



Removable Lid



Vacuum Collection Tank



Vacuum & Steam Control



Vacuum ON/OFF

- Push button to turn ON vacuum
- Light must be solid before starting (*no blinking light*)
- Vacuum pressure can be adjusted on the hose handle
- Wet/dry vacuum can be used independently or with the steam and extraction
- Utilize the vacuum to reduce surface moisture while cleaning
- **Vacuum will only operate on Low & Medium when using steam**
- **Max Speed** can only be used when using the vacuum independently without steam or extraction

Add tap water to extraction bottle



Steam Button

- Push button to start building steam pressure.
- Blinking light = boiler is heating and building pressure.
- Light will turn solid when ready.
- Steam light will start blinking during use. This means boiler is heating.
- **RED** light = low water

Steam Pressure Control



Most cleaning jobs can be performed on low or medium steam setting.

Quick Start

1) REMOVE TANK LID

- Lift both silver handles to remove lid



2) ADD WATER

1) Steam Reservoir Tank

- Lift lid and add water (tap water)

2) Vacuum Collection Tank:

- Add water to fill mark
- Reassemble into SeaHawk and lid



3) Extraction Bottle

- Add water and insert



3) ATTACH HOSE

- Insert the vacuum hose with the release button on top

4) PLUG INTO ELECTRICAL OUTLET

 
- The SeaHawk should be the only appliance plugged into the power outlet
- Use only a 12 gauge / 15AMP rated or higher extension cord
- It will take 5 minutes for the SeaHawk to heat and be ready to use



ON/OFF

5) ON/OFF – Push BOTH the Steam & Vacuum Button

- Once the boiler reaches working pressure, the **Orange** light will go solid and the SeaHawk is ready to use

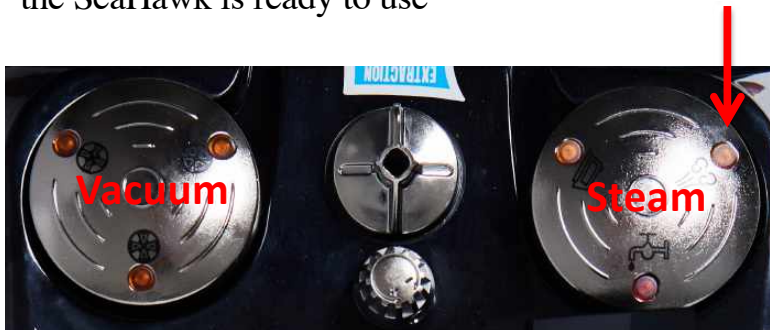

Quick Start

6) BLEED THE HOSE

Pull the trigger on the hose handle for 10 seconds to **BLEED** excess water from the hose. Hold over sink to catch excess water.

- When only steam is released from the hose, your SeaHawk is ready to use



7) STEAM CONTROL DIAL controls the amount of steam released.

- **Increase** steam pressure by turning the dial toward the (+) sign
- **Decrease** steam pressure by turning the dial toward the (-) sign
- Turning the dial all the way to (-) is the lowest possible setting and *no steam will be released from the hose*



8) VACUUM

Push the vacuum button on the SeaHawk to turn ON the vacuum.


- One solid light = LOW vacuum
- Two lights = Medium vacuum
- If lights are blinking, push the vacuum button again on the SeaHawk
- Press the vacuum button  on the hose handle to activate
- Increase or decrease suction, push and HOLD the vacuum power button on the handle 
- To turn the vacuum OFF, push the power button on the handle



The vacuum can only be used on low or medium setting while using the steam or extraction function.

9) EXTRACTION

When activated, the extraction feature sprays hot water along with steam for deep cleaning.

- Fill extraction bottle with water and insert on back of the SeaHawk.
- Activate: Push and hold the  button on the hose handle
- The light on the handle turns ON during extraction mode



10) REFILLING

- When your SeaHawk runs low on water, the **Red** low water light on the SeaHawk comes on and the steamer will start beeping
- Push the steam button on the SeaHawk to reset the alarm